
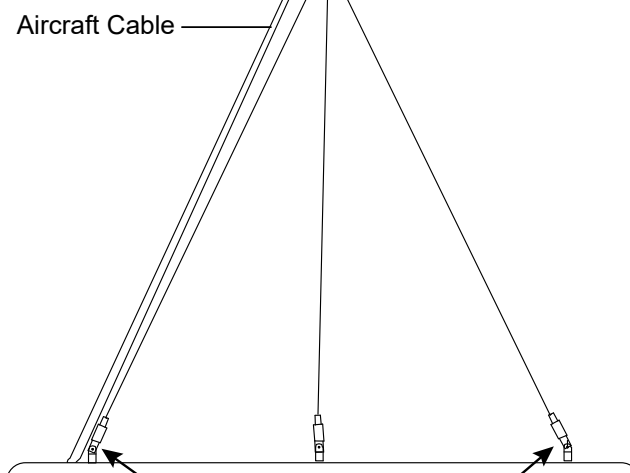
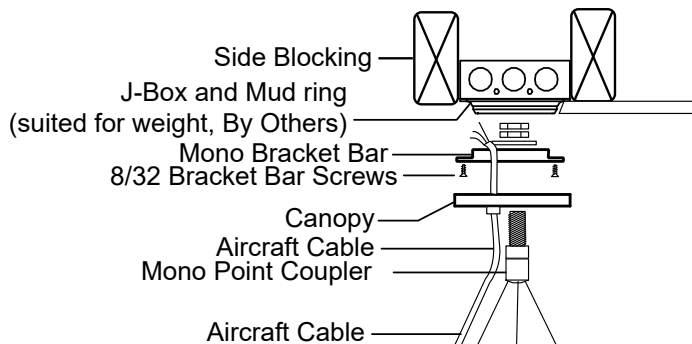
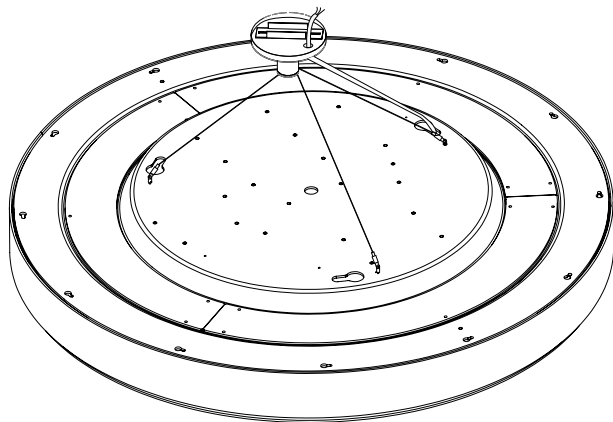


INSTRUCTION SHEET

Mono CSS - Cable Suspended

	24" -45lbs	36" -55lbs	48" -65lbs
---	-------------------	-------------------	-------------------



1. Install Jbox (by others) Assure that all j-boxes are rated to support the fixture weight and are properly grounded.
2. Support the J-box by attaching to appropriate framing. **Use appropriate J-box for Fixture Weight.**
3. Fasten to structure(By others)
4. Secure provided mono bracket bar to mud ring.
5. Run 3 cables through the Mono Point Coupler
6. Screw threaded rod into Mono Point Coupler.
7. Screw 2 provided chrome couplers on thread rod
8. Slide canopy over thread rod and coupler
9. Screw theaded rod into bracket bar
10. Raise fixture and feed 3 cables coming out of mono coupler into each adjustable cable gripper on the top of the fixture.
11. Adjust fixture to desired height and level out with cable grippers. Trim excess cable.
12. Insert AWM cord up through the hole in the canopy, into J-box.
13. Complete wire make-up
14. Install canopy with magnets to bracket bar.
15. Secure power cord with provided strain reliefs. Zip-tie cord to cable.

Servicing is while fixture is suspended

1. Two people are required to remove bottom lens, one on each side of the fixture, performing the same task at the same time. Grasp the fixture with one hand and rotate the lens counterclockwise with the other hand until it "clicks". The Lens will drop free.
2. To release the liner, slide spring latch to hinge down each liner half. (24" uses thumb screws)
3. You will have access to all drivers behind liner and keyholes for surface mounting.
4. Re-assemble by following 1 - 3 steps in reverse.

Adjusting lens level

1. Two people are required to remove bottom lens, one on each side of the fixture, performing the same task at the same time.
2. Grasp the fixture with one hand and rotate the lens counterclockwise with the other hand until it "clicks". The Lens will drop free.
3. Select either flush or drop lens slot, raise and twist to lock into place.

*See next page for illustrations


820-00152

V-0719

Note: To be installed by a qualified electrician per N.E.C. and all local codes.

INSTRUCTION SHEET

Fixture access for installation/service

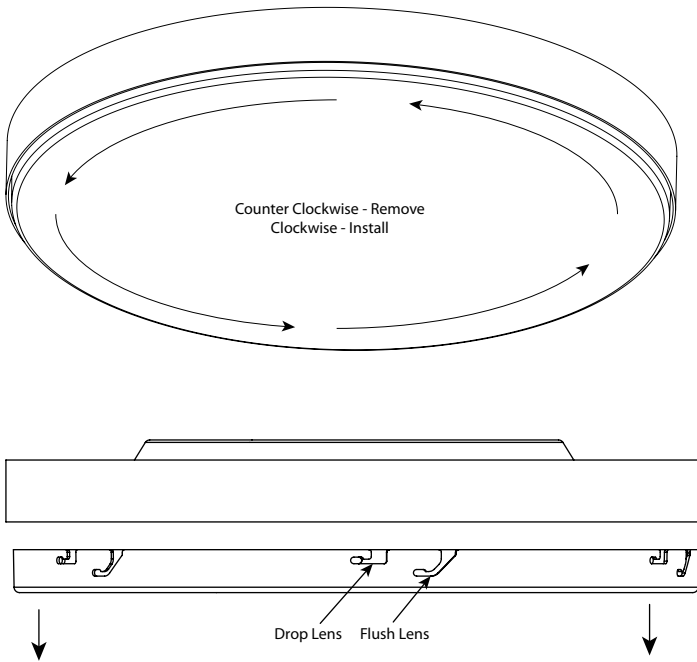


Servicing/ Installing Fixture

1. Two people are required to remove bottom lens, one on each side of the fixture, performing the same task at the same time. Grasp the fixture with one hand and rotate the lens counterclockwise with the other hand until it "clicks". The Lens will drop free.
2. To release the liner, slide spring latch to hinge down each liner half. (24" uses thumb screws)
3. You will have access to all drivers behind liner and keyholes for surface mounting.
4. Re-assemble by following 1 - 3 steps in reverse.

Adjusting lens drop

1. Two people are required to remove bottom lens, one on each side of the fixture, performing the same task at the same time. 2. Grasp the fixture with one hand and rotate the lens counterclockwise with the other hand until it "clicks". The Lens will drop free.
3. Select either flush or drop lens slot, raise and twist to lock into place.

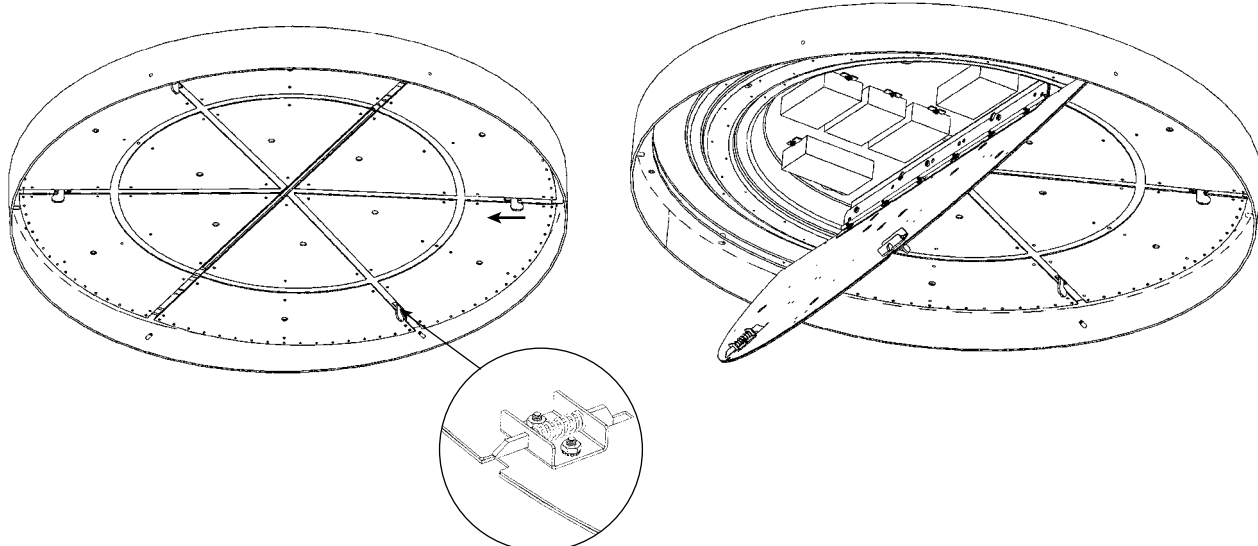

Liner Release

Note: To be installed by a qualified electrician per N.E.C. and all local codes.