
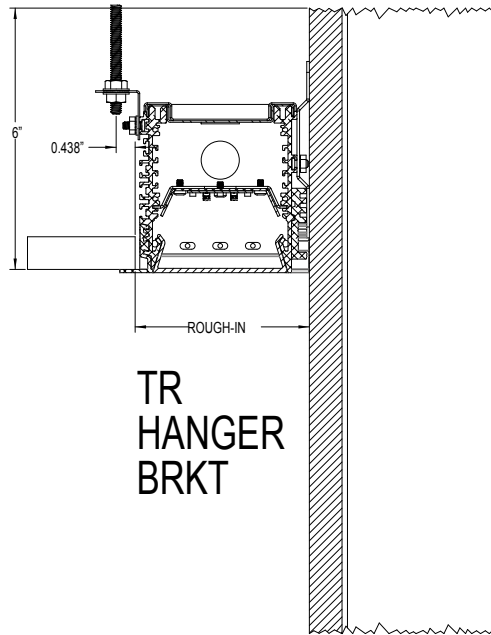


INSTRUCTION SHEET

Installation Guide

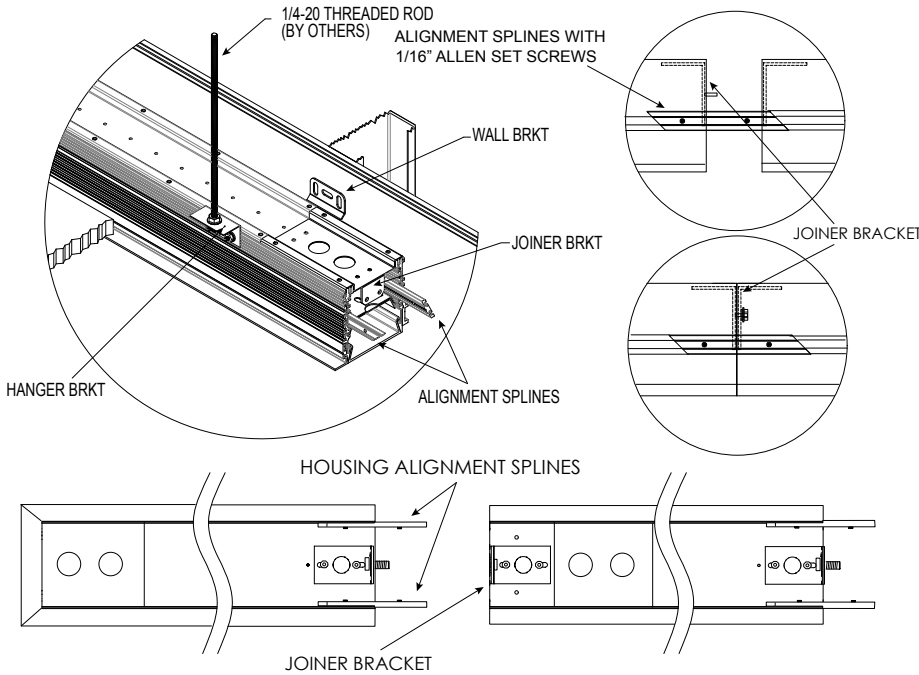

ROUGH-IN WIDTH	
PERIMETER REGRESS FIXTURE	
	TR/TL
165	2.563"
225	3.000"
325	4.000"
500	5.750"

1. See continuous run matrix for rough-in opening length.
2. Ensure wall is extended 6" above ceiling.
3. Adjust wall brackets to align with wall studs or blocking support.
4. For continuous runs, remove lens and reflector/liner.
5. Install fixture(s) into roughed-in opening. Install screws thru wall brackets and attach threaded rod to hanger bracket. For continuous runs, do not completely tighten screws until alignment splines are positioned between sections and tightened, and joiner brackets are tightened. Note: ensure fixture does not warp when tightening screws. Check by making sure lens fits properly.
6. Bring conduit to fixture thru access panel or end cap and make wire connections inside fixture. Access panel can be temporarily removed to simplify wiring.
7. Reinstall reflector/liner and lens.

Note: To be installed by a qualified electrician per N.E.C. and all local codes.

820-00136

V-0617